

Trailer Lock User Manual



 
 
 
KBIF-94A/ KBIF-105A

INSTALL BATTERY


1. Unlock the lock and pull out the top helmet.
2. Remove the Hex screw inside the ball using the provided Hex key.
3. Remove alarm module from lock body.
4. Open the waterproof cover.
5. Install a battery.
6. Close the cover and reassemble the parts.

HOW TO LOCK

1. Insert a fresh battery into the coupler lock.
2. Lift the locking lever and place the ball of coupler lock underneath the coupler.
3. Fit the top helmet above the coupler, ensuring that the holes are aligned.

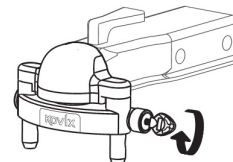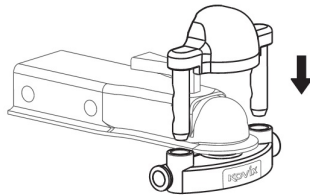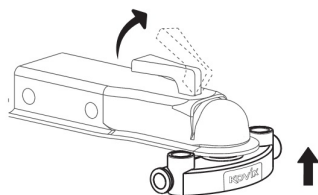

 4. To set the alarm, please refer to 'Setting the Alarm' section.
5. To unlock, insert the key into the key barrel and rotate clockwise. Lift the locking lever, remove the top helmet and pull the base downward.

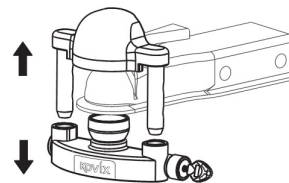

- * Depending on your coupler type, you may want to adjust the height of the ball receiver (for a tighter fit under the tow ball) by using the supplied spacer rings in between the ball and the base.

SETTING THE ALARM

1. To Activate the alarm function, insert the key into the key barrel and rotate anti-clockwise to lock. You will hear ONE Beep. After 5 seconds, the siren will sound a single long beep to confirm the alarm is armed.
2. If the lock is hit or shaken, the siren will emit five rapid beeps as a warning.
 - * If further movements are not detected within 5 seconds, the alarm will rearm automatically.
 - * If the lock is continuously attacked, the siren will burst out a 120dB alarm for 15 seconds. The above process will repeat until no movement is detected.
3. You may stop the alarm by unlocking it.

ALARM MODELS

